


Assembly Instructions


ProClamp™ Hose Connector and Stainless Steel Overbraid Assembly

Pro Clamp™

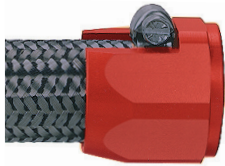


Use PRO CLAMP™ connectors on any rubber or stainless steel braid hose.


Do not be use on brake lines, air conditioning, power steering or other high pressure lines.

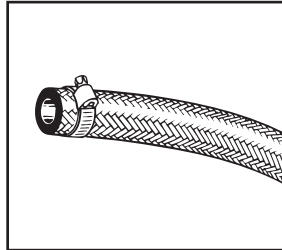

Step 1. Slide clamp onto hose.

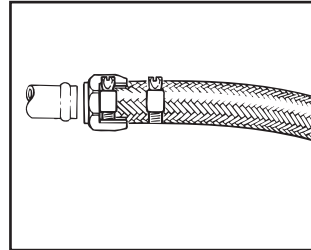


Step 2. Push cap (socket) onto hose until it bottoms. Then slide clamp under cap.

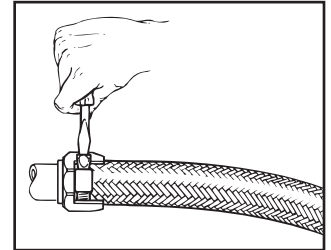


Step 3. Push assembly onto beaded tube. Position clamp for appearance. Tighten with a screwdriver.


Overbraid




Stainless Steel Overbraid is used to dress up existing rubber hoses. Simply slip over current radiator hoses and can be clamp with the Aeroquip Performance Products PRO CLAMP™ connectors.

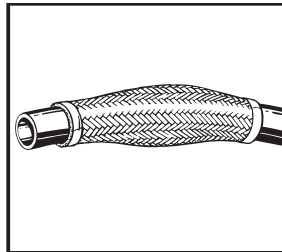

Step 1. Disconnect the radiator hose. Slide overbraid over the radiator hose.

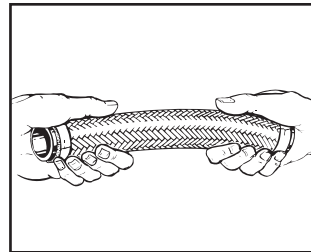

Step 2. Stretch until snug, mark length and cut with tin snips.

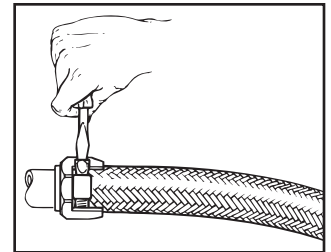

Step 3. Reconnect radiator hose and secure hose and overbraid with clamp or ProClamp clamp.



Compliments of Aeroquip Performance Product team. For for more technical information please visit Aeroquipperformance.com